

DOODLE SKATE SET-UP

1. With the Doodle Scrub setting upright on a pad, disconnect the power connector and remove the handle.




2. Set the Doodle Scrub with the side mount facing yourself.



3. Turn the Doodle Skate upside down with the open end facing the Doodle Scrub, and flip the Doodle Skate cradle out.



4. Move the yellow power cord out of the way, while lowering the Doodle Skate onto the Doodle Scrub.

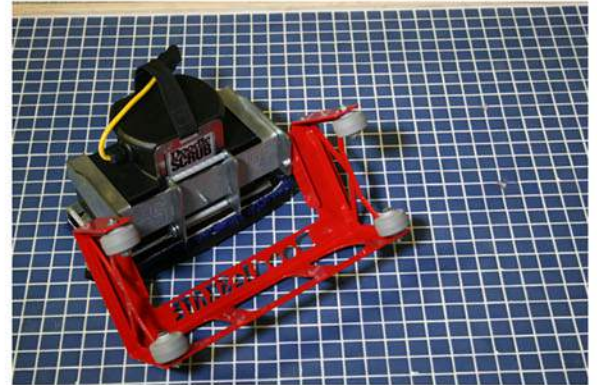


5. Be sure that the Doodle Skate hooks are seated in between the side handle mount and the Doodle Scrub Base. Press down firmly to ensure the Doodle Skate is secure.




6. Place the bracket on the handle mount, and tighten the wingnut.




7. Rotate the Doodle Skate on the wheels.

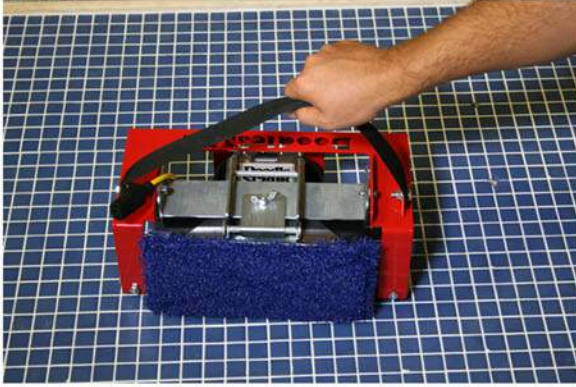


8. Connect the Doodle Scrub handle to the Doodle Skate, and reconnect the power.

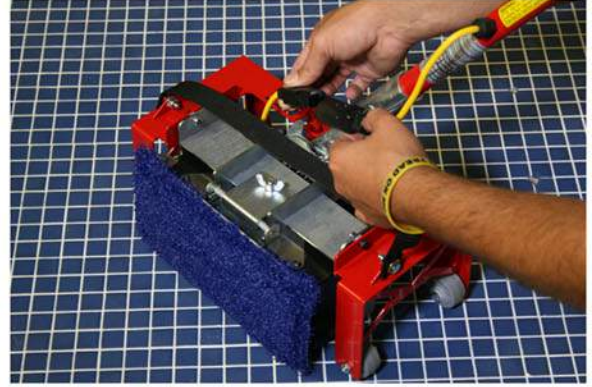

DOODLE SKATE TIPS FOR OUTSTANDING SCRUBBING PAD PLACEMENT

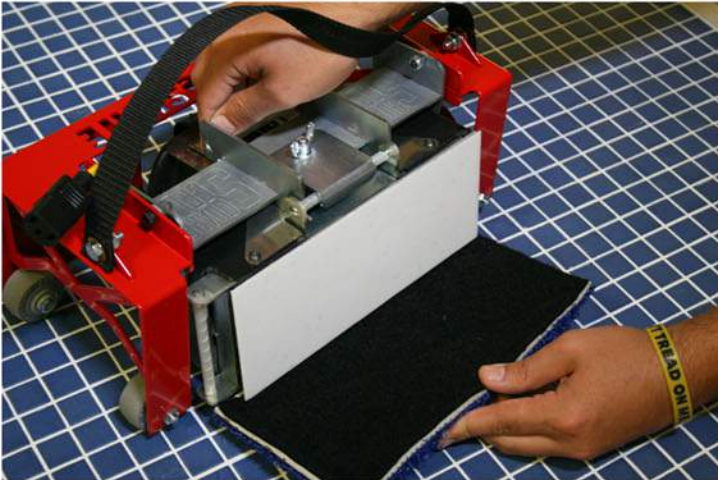

1. Place the pad, scrubbing side down under the Doodle Skate.

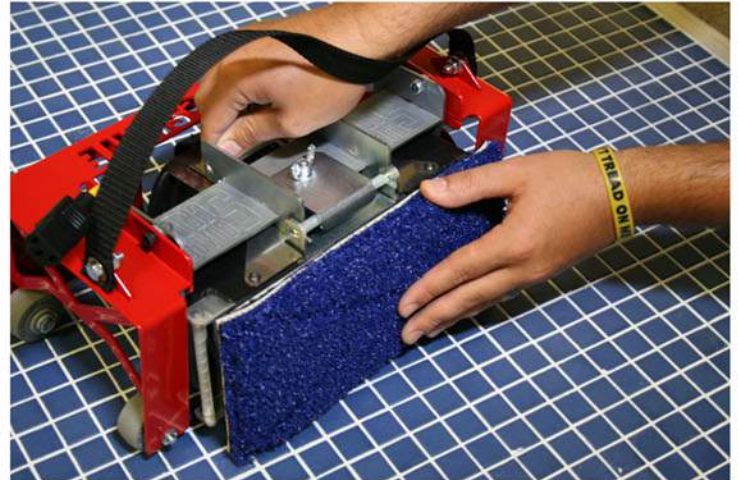

2. Fold the pad up. The top edge of the pad should be flush with the Doodle Scrub plate.

This will create a curve in the pad at the bottom, allowing more scrubbing power for bottom corners and curved surfaces.

Pushing against the Doodle Skate with your foot can help scrub even deeper.

WWW.SQUARESCRUB.COM

